

SUPER GLOSS FINISH APPLICATION

Tools Needed

- Wet Floor Sign
- Mop Bucket & Wringer
- Plastic Liner
- Clean, Dry Rayon Mop
- Fan (poor ventilation areas only)



Product Needed

P&G Pro Line
Super Gloss Finish



FREQUENCY OF CLEANING: Apply floor finish following deep scrub & recoat or stripping operations.


PREPARATION: Collect all tools, equipment and products required. Ensure all equipment is operational. Review MSDS, product labels and caution statements. Choose appropriate safety equipment.

SPECIAL DIRECTIONS FOR THIS TASK: Before applying finish, make sure the floor surface is properly prepared. If floor has been stripped, all residual stripper must be removed. For porous floors, an initial coat of floor sealer is recommended. Floor must be completely dry and tack free before performing this procedure. Start with clean, dry rayon mop head. When finished, clean and return equipment to storage area. Remove wet floor sign only when surface is thoroughly dry.



STEP 1

- Put out wet floor sign in area to be finished.

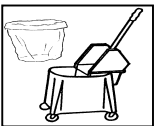

STEP 2


- Line mop bucket with plastic liner.
- Pour floor finish into mop bucket.



STEP 3

- Fully coat mop in finish.


NOTE: Start with clean, dry rayon mop.

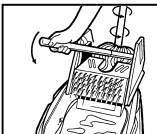

STEP 4

- Twist lower portion of mop in wringer and wring out finish.


NOTE: Top mop strings will feed mop with right amount of finish for a thin, uniform coat.

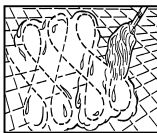

STEP 5

- Starting at farthest point from door, picture frame a 10 ft. by 10 ft. area with mop.
- Mop inside frame using a figure-8 motion.
- Repeat Step 3 through Step 4 to replenish finish when mop head begins to drag on floor.

NOTE: Apply a thin, uniform coating.

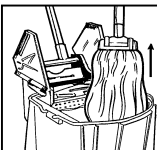

STEP 6


- Move to next 10 ft. by 10 ft. area, working towards doorway and repeat Step 3 through Step 6.



STEP 7

- Allow 30 – 40 minutes for floor to dry before applying additional coats
- Floor should be tack free for 10 minutes before applying additional coats.


NOTE: For thorough drying in poor ventilation areas, dry times may be longer. A fan may be used after floor loses wet appearance (10 – 20 minutes). Direct air movement up toward ceiling or out from room.

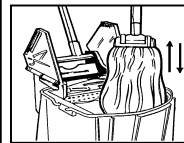

STEP 8

- Repeat Step 3 through Step 8 for additional coats.

NOTE: For Deep Scrub & Recoat application, apply 2 – 3 coats. If floor has been stripped, apply 4 or more coats.

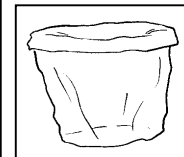


STEP 9

- When entire area is complete, remove liner from bucket, twist, tie and discard.
- NOTE:** Do not pour remaining finish back into product container.

DAY-TO-DAY MAINTENANCE

STEP 1

- Dust mop area as need following the Dust Mop Procedure.

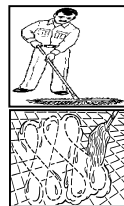

STEP 2

- Wet clean area as needed using any of the following wet cleaning procedures: Damp Mop, Disinfecting Damp Mop or Automatic Scrubber Floor Cleaning. For accumulated soil, lightly scrub as required.



STEP 3

- Burnish floor as needed to maintain gloss following the Burnish Procedure.



STEP 4

- As required by conditions, apply an ultra high speed restorer following the Mop-On Restorer Procedure.



STEP 5

- Periodic application of a thin finish top coat will be required to replenish the base film for acceptable burnishing results. Follow the Deep Scrub & Recoat Procedure.